

## ALARM MESSAGES, TESTS AND CONFIRMATIONS

EIS-EX ON	It confirms the switching on of eis-ex.
EIS-EX OFF	It confirms the switching off of eis-ex.
ENGINE HEATING ON	It confirms that engine heating is switched on
ENGINE HEATING OFF	It confirms that engine heating is switched off
AWNING LIGHT ON	It confirms that awning light is switched on
AWNING LIGHT OFF	It confirms that awning light is switched off
LIGHTS ON	It confirms that lights are switched on.
LIGHTS OFF	It confirms that lights are switched on.
AUX ON	It confirms that AUX is switched on.
AUX OFF	It confirms that AUX is switched off.
PUMP ON	It confirms that pump is switched on
PUMP OFF	It confirms that pump is switched off
GAS BOTTLES RESERVE	Main gas bottles reserve alarm
PUMP BLOCK	It displays the intervention of pump lock
STEP OUT	It displays that step is down when engine is on
LEISURE B. RESERVE	It displays that leisure battery is in reserve
LEIS. B. DISCHARGE	It displays that leisure battery is discharged
MOTOR B. DISCHARGE	It displays that car battery is discharged
DRINK RESERVE	It displays that drink water tank is in reserve
AUX TANK RESERVE	It displays that auxiliary water tank is in reserve
AUX TANK FULL	It displays that auxiliary water tank is full
WASTE FULL	It displays that waste water tank is full
230V CONNECTED!	It displays that the 230V net is connected when engine is on
OPTIONAL	It displays that this function has not been set
BATTERY SAVER	It displays the intervention of minimum voltage device.
ERROR COM	It indicates a communication error

## USER'S SETTINGS

- ◆ To enter the set mode, press the "PROG" button (ref. 04) for more than 2 seconds from the main clock screen.
- ◆ To run through the menu press arrow keys (ref. 02 and 03).
- ◆ To select a function press the "PROG" button (ref. 04).
- ◆ To go back to previous menu select "↑MENU↑".
- ◆ To exit the set mode and save the settings, select "EXIT" in main menu (exit is confirmed by the message "PROG. OK !").
- ◆ To exit without saving wait 30 seconds for automatic exit without pressing any key.

### ALARM CLOCK

- MENU** → ALARM CLOCK  
→ Select the function
- ALARM CLOCK REG.  
Set alarm clock time (HOURS / MINUTES).
  - ALARM  
Activation/deactivation of alarm clock (ON / OFF).

### CLOCK

- MENU** → CLOCK  
→ Select the function
- CLOCK SETTING  
Set clock time (HOURS / MINUTES).
  - DATE SETTING  
Date set (DAY / MONTH / YEAR).

### LANGUAGE

- MENU** → LANGUAGE  
→ Select the function
- ITALIANO
  - DEUTSCH
  - FRANCAIS
  - ENGLISH