

DISPLAY

MENU → DISPLAY
→ Select the function

-CONTRAST

Display contrast setting (0+100 %).

-BACKLIGHT

Display back light can be:

-ON (always on)

-OFF (always off)

-AUTO (light switches off if no button is pressed for 10 seconds).

TONES

MENU → TONES

→ Select the function

-ALL

Acoustic alarms and button tones are connected.


-ONLY ALARM

Acoustic alarms are connected, button tones are disconnected.

-NONE

No acoustic alarm, no button tones.

"DS-450EM" DISTRIBUTION BOARD

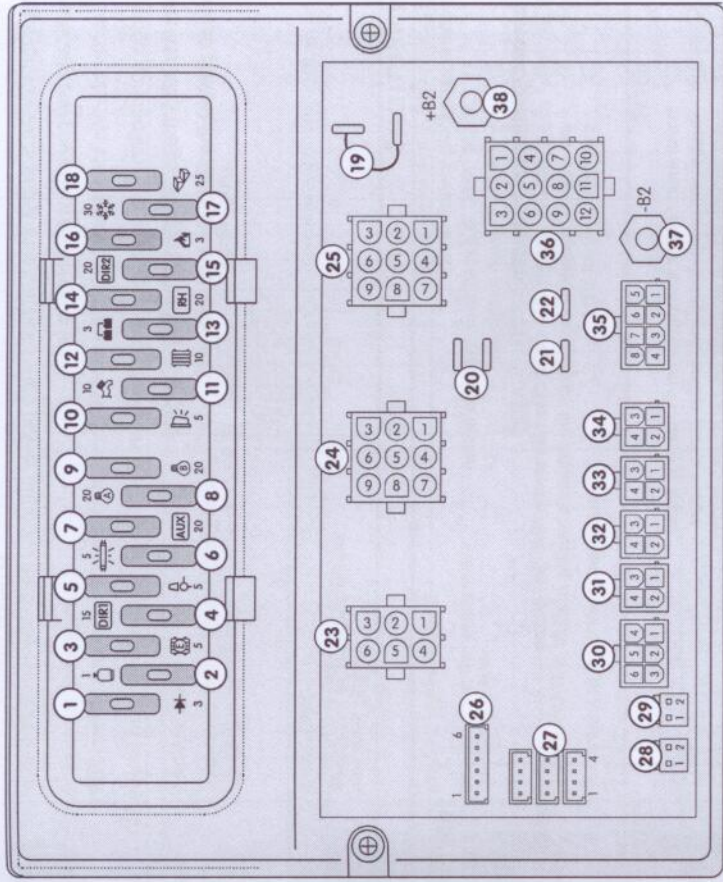

- 1) 3A fuse for control panel power supply.
- 2) 1A fuse to give power to the "EIS-EX" exit, it depends on the "EIS-EX" button.
- 3) 5A fuse for engine's heating power supply, it depends on the engine's heating button.
- 4) 15A fuse for "DIR1" auxiliary exit power supply, which is directly connected to leisure battery (B2).
- 5) 5A fuse for power supply of gas valve, directly connected to the leisure battery (B2).
- 6) 5A fuse for power supply of lights through pushbutton, it depends on the main button.
- 7) 20A fuse for "AUX" auxiliary exit power supply, it depends on the AUX button.
- 8) 20A fuse for power supply of light group "A", it depends on the lights button.
- 9) 20A fuse for power supply of light group "B", it depends on the lights button.
- 10) 5A fuse for awning light power supply, which depends on the awning button and automatically switches off when engine is on.
- 11) 10A fuse for water pump power supply, it depends on the pump button.
- 12) 10A fuse to give power to heating, it depends on main button.
- 13) 3A fuse for OUT D+ simulated exit protection.
- 14) 20A fuse to give power to the "RH" auxiliary exit, it depends on the main button.
- 15) 20A fuse for "DIR2" auxiliary exit power supply, which is directly connected to leisure battery (B2).